


Quick Reference Guide

DZ23	Three-spindle equalising and shut-off valve
DZ24	Four-spindle equalising and shut-off valve with vent valve

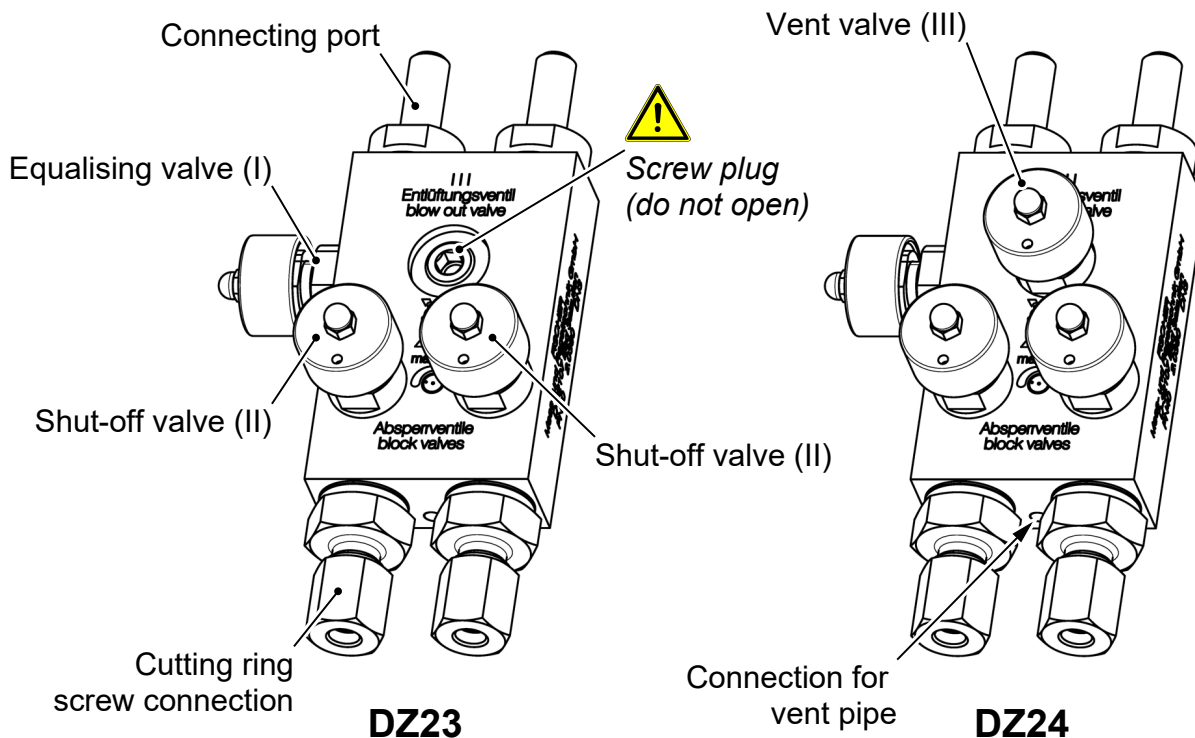

To assemble the pressure gauge

1. All valves are closed on delivery.
2. Open the equalising valve (I) and the shut-off valves (II) before connecting the differential pressure pipes.
3. Fit the differential pressure gauge and then pressurise the line.

Point 4 only applies to four-spindle valves!

4. Open the vent valve (III) to vent the entire measuring system.



With certain media, there is a risk of injury, as the medium can escape from the vent opening. Wear suitable protective equipment. Use the vent pipe (accessory) and a suitable container to collect the medium.

5. Close the vent valve (III) again.
6. Close the equalising valve (I).
The differential pressure is now displayed.
7. The shut-off valves (II) remain open.

To dismantle the pressure gauge

1. Open the equalising valve (I).
2. Close both shut-off valves (II).
3. The screw connections on the device side are loosened and the pressure gauge can be removed.

